



*Wir danken Ihnen für den Kauf dieses Produktes aus unserem Hause.
Alle Angaben nach bestem Wissen und Gewissen, jedoch ohne Gewähr.
Allzeit gute Fahrt wünscht Ihnen Ihr KEDO -Team*

Artikel-Nr.: JVB0034
JvB-moto Frontkotflügel XSR700 MT07

Komponenten:

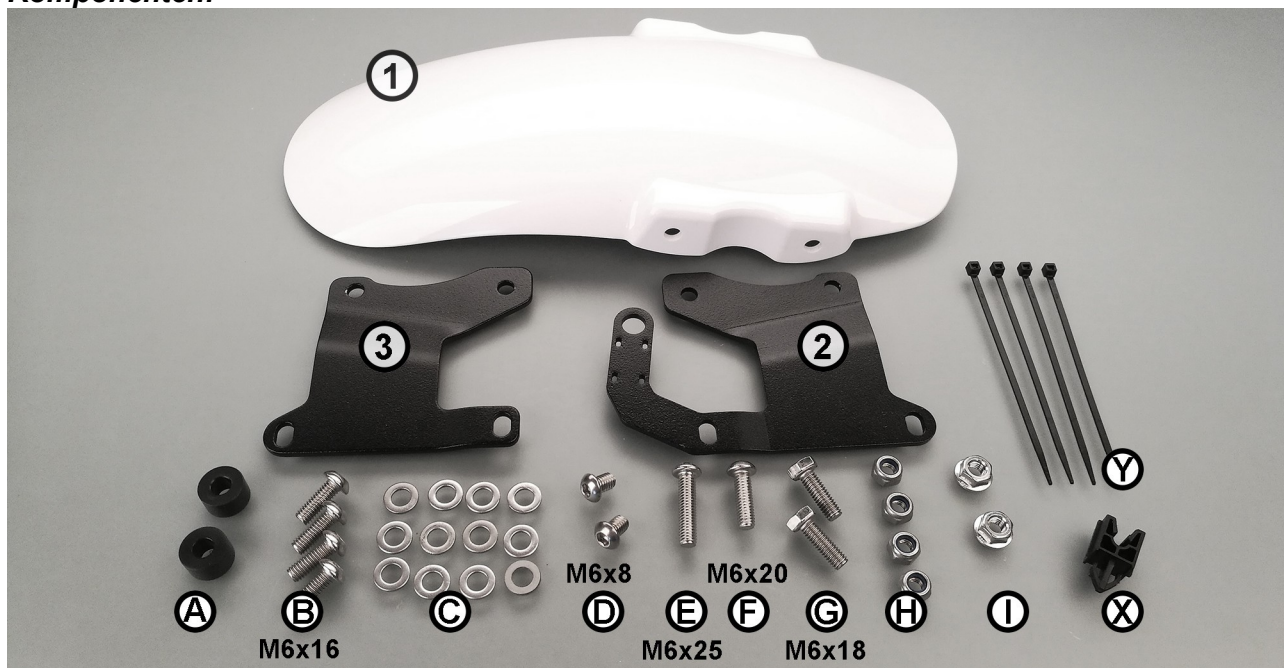


Vorbereitung:

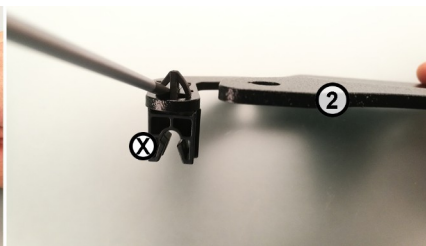


Bei Fahrzeugen mit ABS kann der Bremsleitungsclip (X) zur Befestigung der Bremsleitung verwendet werden.
Beim Einstecken überprüfen, ob der Bremsleitungsclip korrekt im Aluhalter (2) eingerastet ist. Den Clip einstecken und mit einem kleinen Schraubendreher die Arretierungsarme auf der Rückseite über das Blech hebeln.

Bei Fahrzeugen ohne ABS kann der Bremsschlauch mit zwei Kabelbindern (Y) am Halter (2) befestigt werden.


Montage:

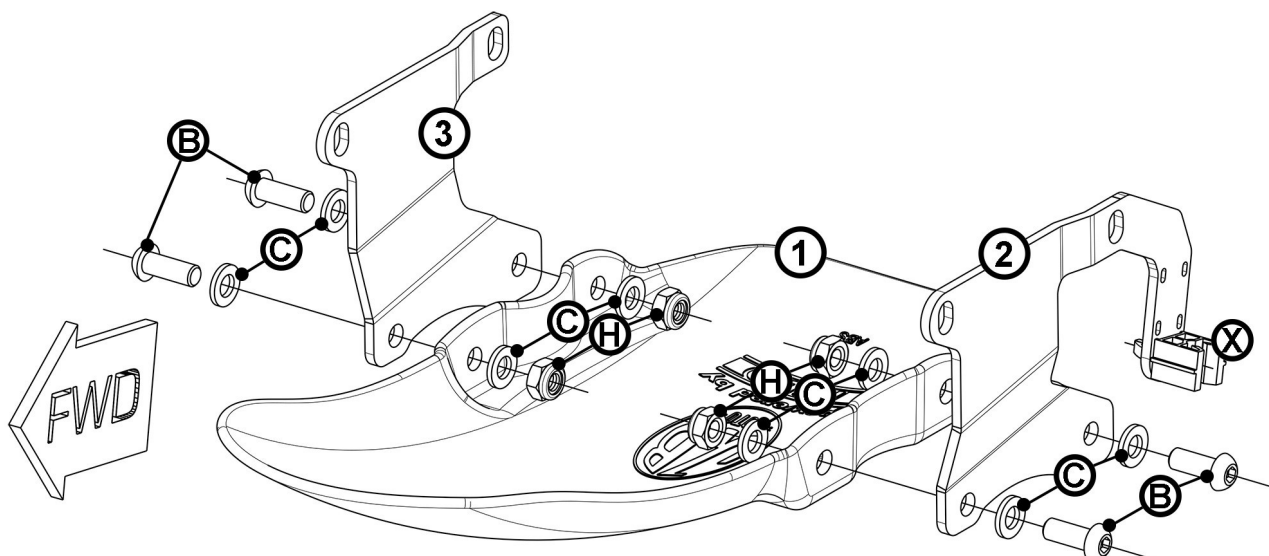


Originalen Bremsschlauchhalter
auf dieser Seite (links) befestigen!

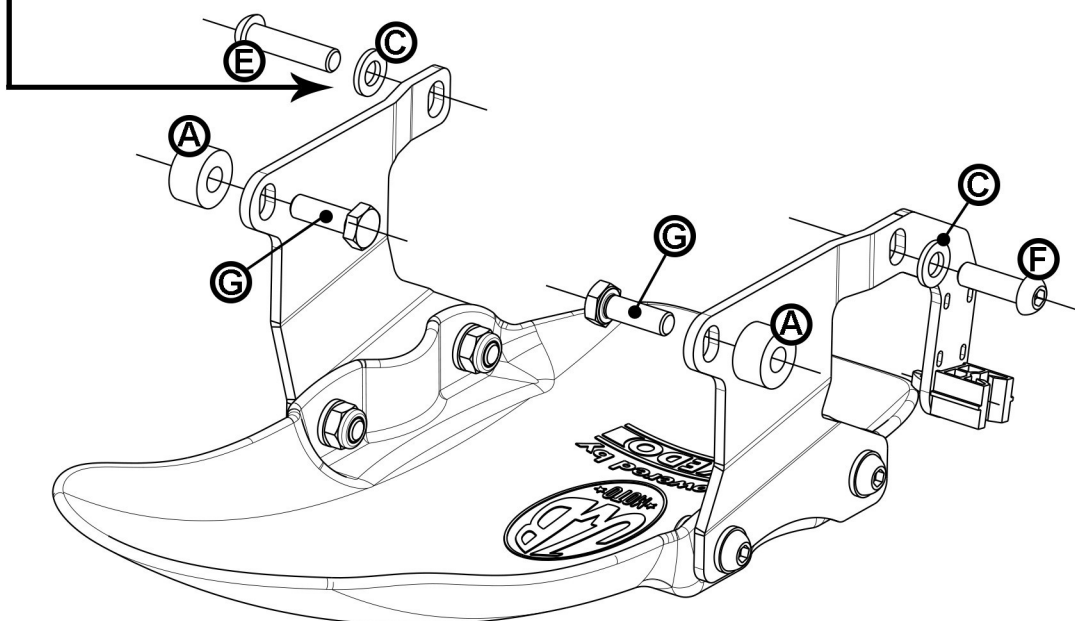

Alle Angaben nach bestem Wissen und Gewissen, jedoch ohne Gewähr. - All information to the best of our knowledge and belief, but without guarantee.

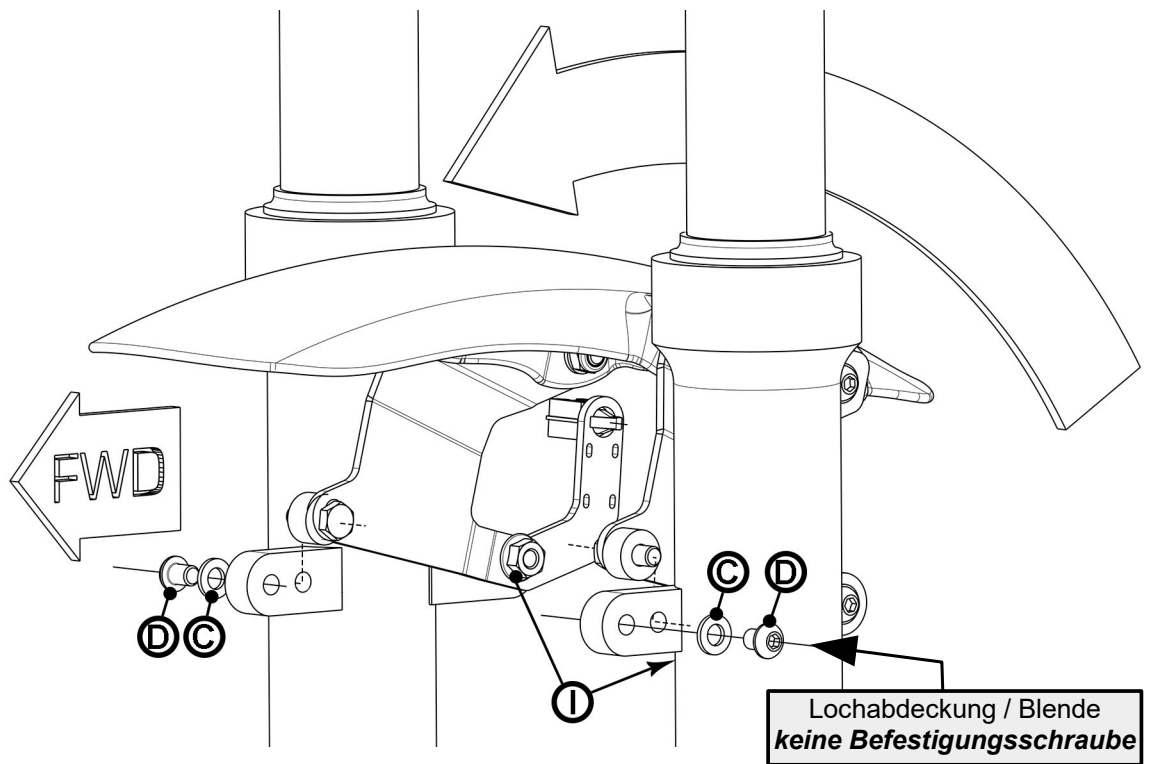

Das Rad ist nicht gezeigt, muss aber **NICHT** ausgebaut werden.
 Die hinteren Befestigungen (Schrauben (F) / Muttern (I)) „handfest“ vormontieren, dann die vorderen Befestigungselemente (Schrauben (G) / Distanzbuchsen (A)) wie gezeigt in Montageposition drehen.

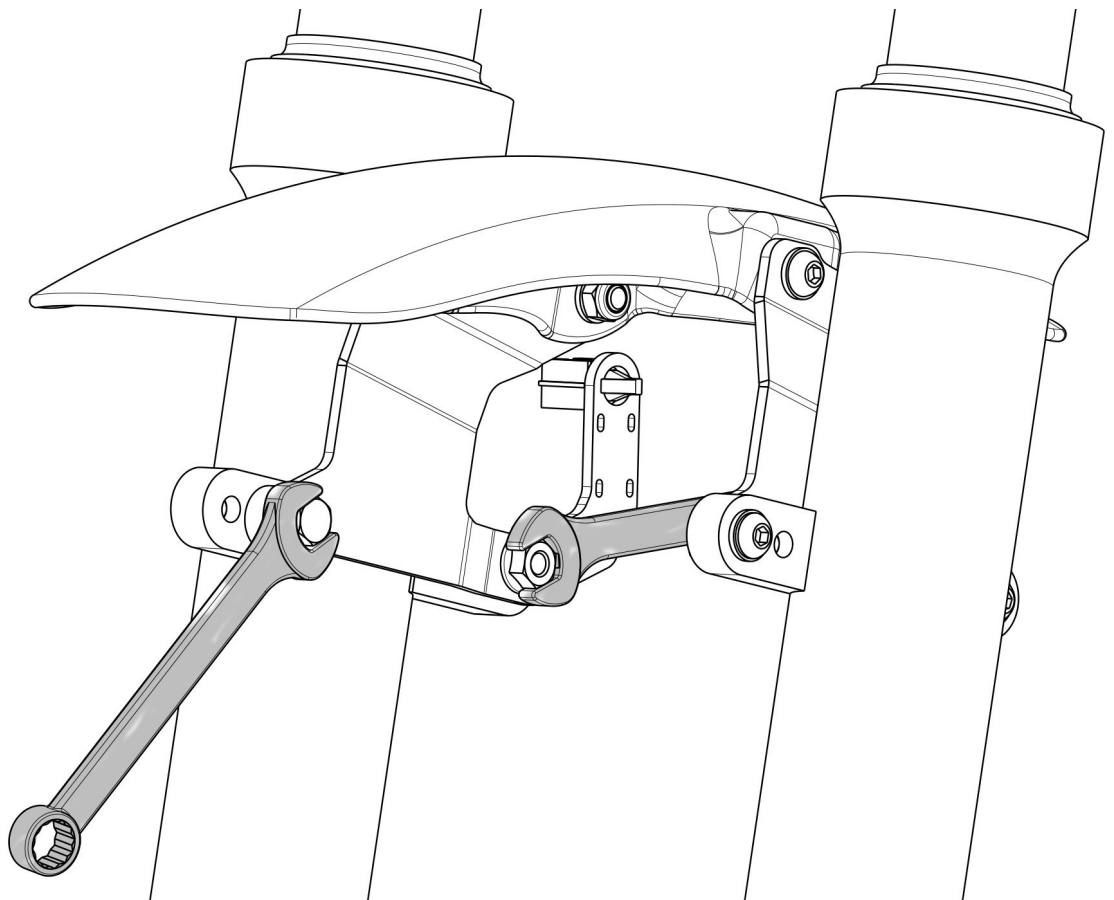


Alle vier Befestigungen (G) / (I) von Innen mit einem Maulschlüssel festziehen.


Thank you for purchasing this product from our company.
All information to the best of our knowledge and belief, but without guarantee.
Your KEDO team wishes you a safe journey!

Artikel-Nr.: JVB0034
JvB-moto Frontfender XSR700 MT07

components:

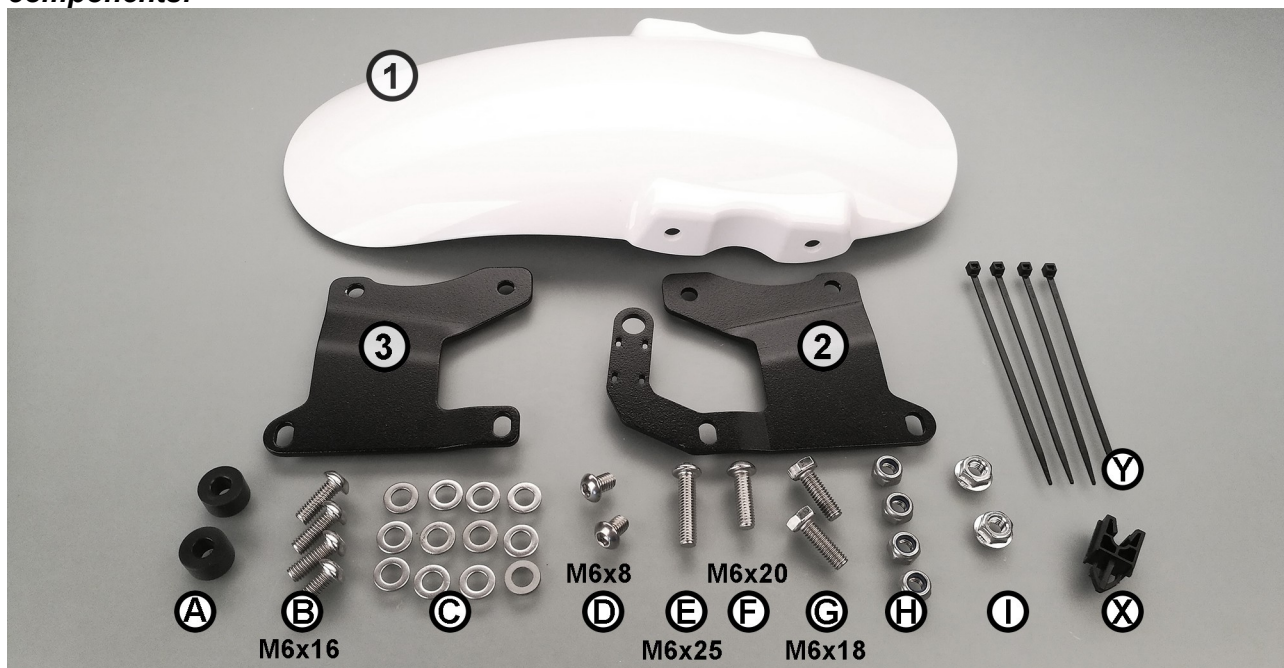


preparation:

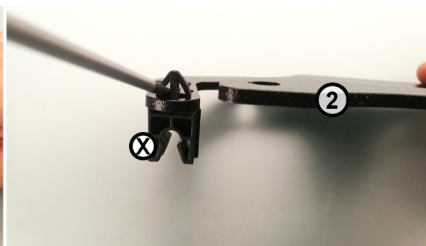


For vehicles with ABS, the brake line clip (X) can be used to attach the brake line.
When inserting, check that the brake line clip is correctly locked in the aluminum holder (2). Insert the clip and use a small screwdriver to pry the locking arms on the back over the plate.


On vehicles without ABS, the brake line can be fastened to the holder (2) with two cable ties (Y).

Montage:

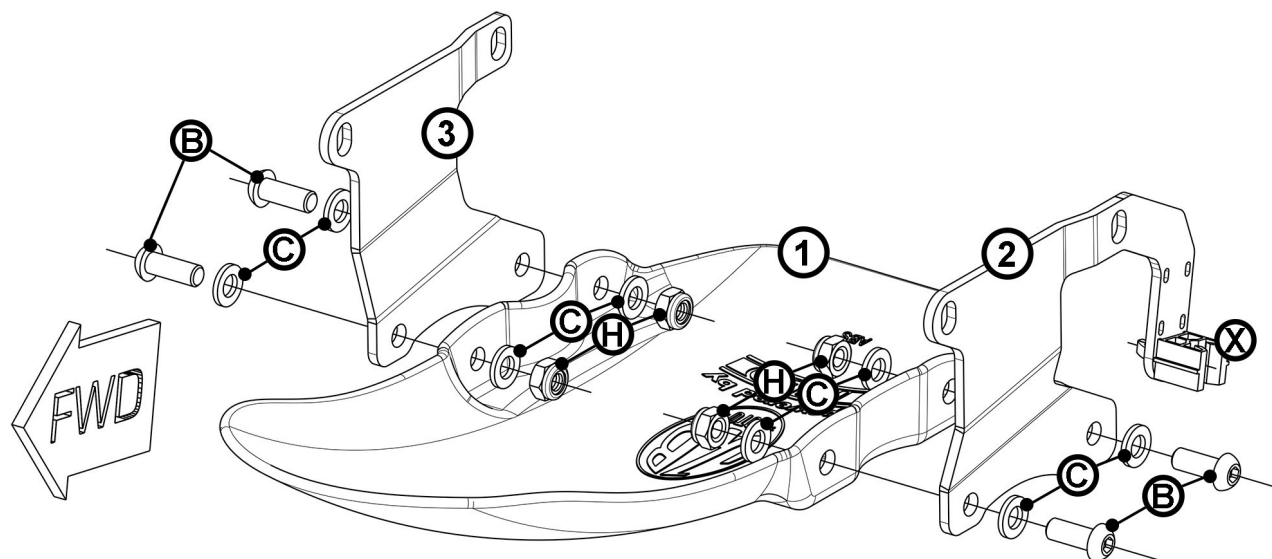


Mount OEM brakeline bracket
on this side (lefthand side)!

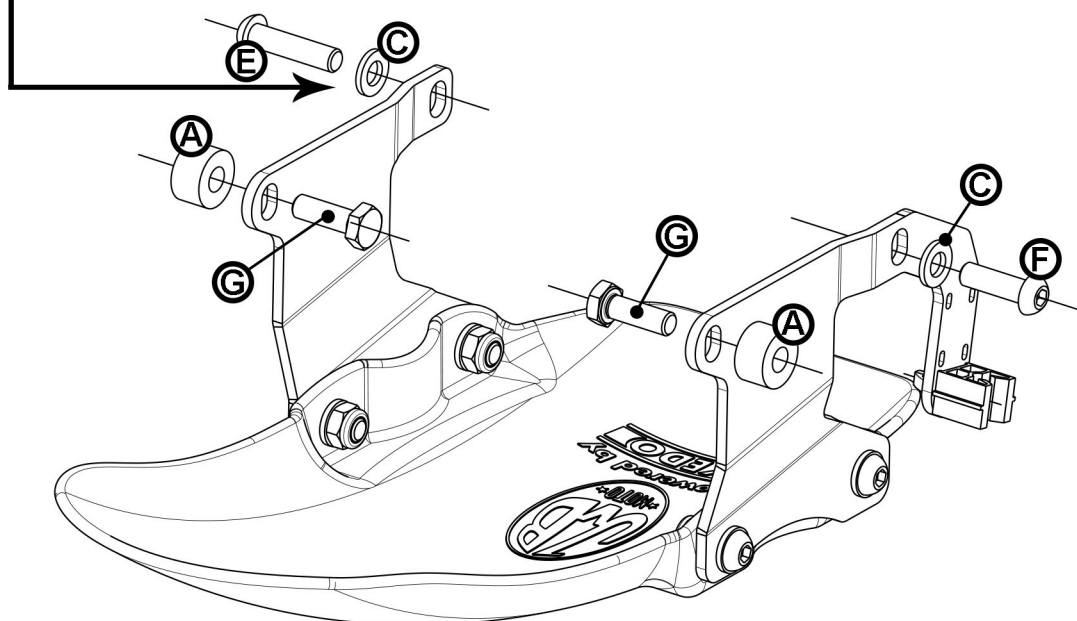

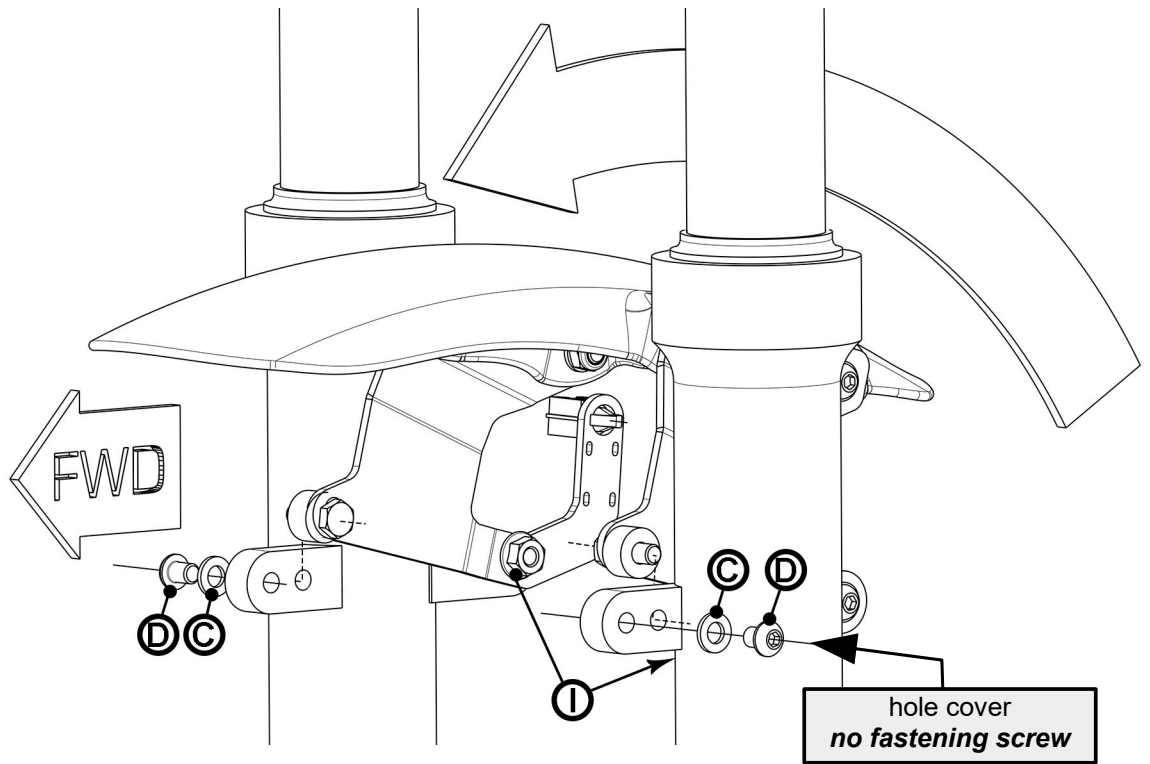

The wheel is not displayed, but does NOT have to be removed.
Loosely tighten the rear screws (bolts (F) / nuts (I)), then rotate the front mounts (bolts (G) / distance socket (A)) into shown position.

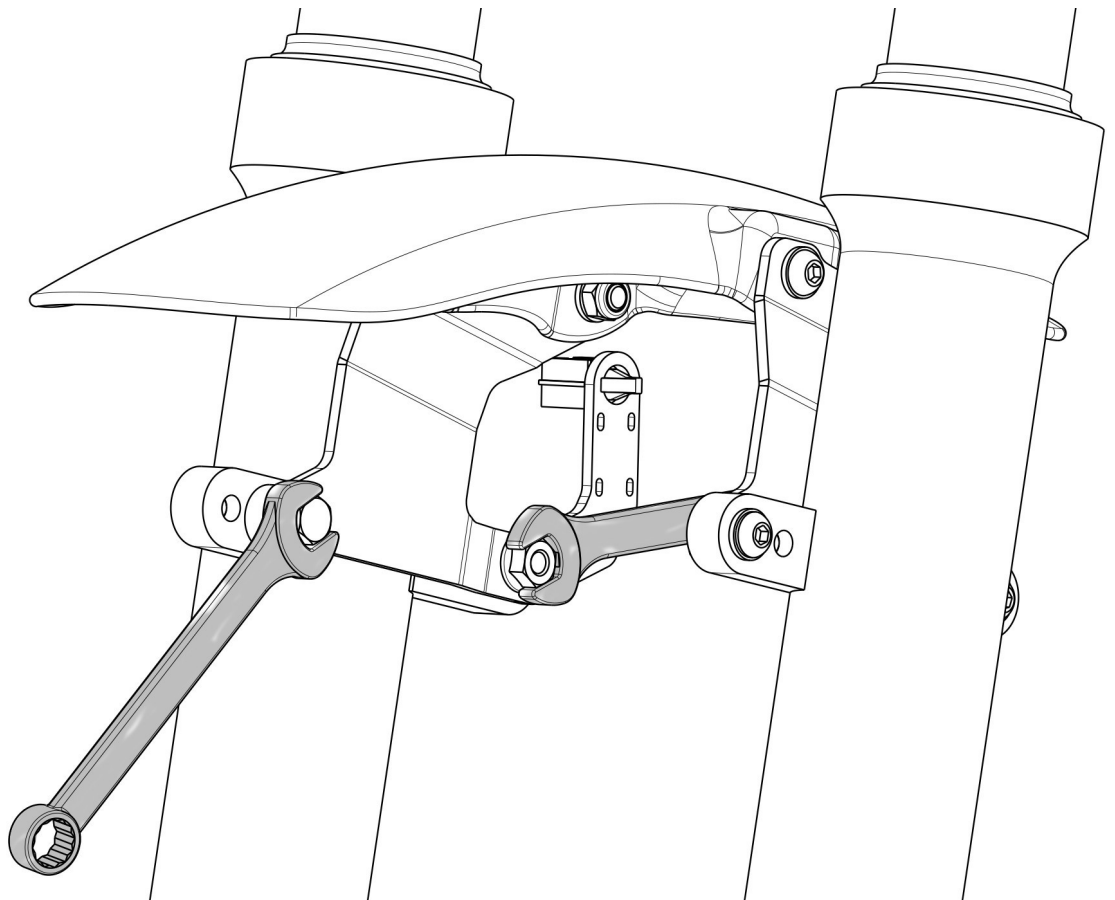

Tighten all four screws (G) / (I) from the inner side with an open jaw wrench!